



# 5128 Air Compressor Pump Piston Assembly Kit Kit Z5128-275


Kit comprises of 1 small green seal, 1 brass piston and retainer

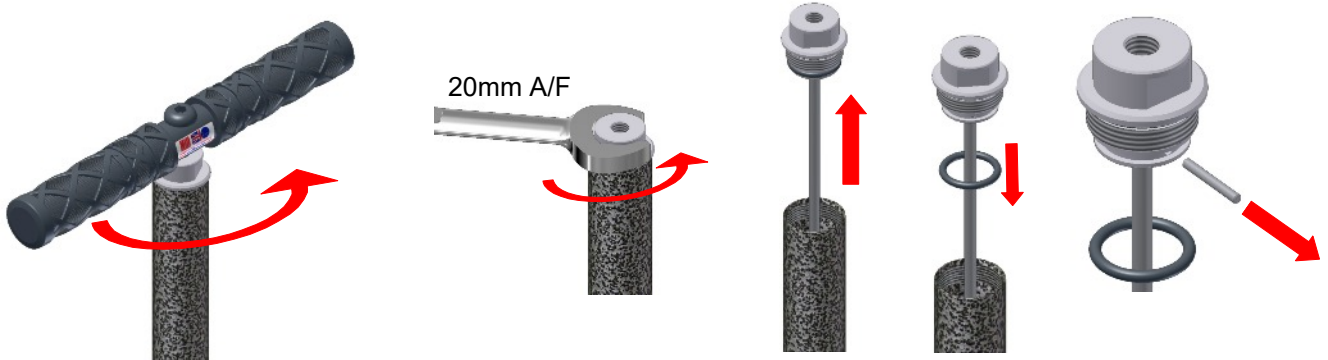

1. Unscrew and remove handle
2. Unscrew handle connector
3. Lift handle connector to o'ring. Remove o'ring to expose pin. Use suitable tool to push pin from one side and then pull out. **Ensure o'ring is securely located in groove on re-assembly.**

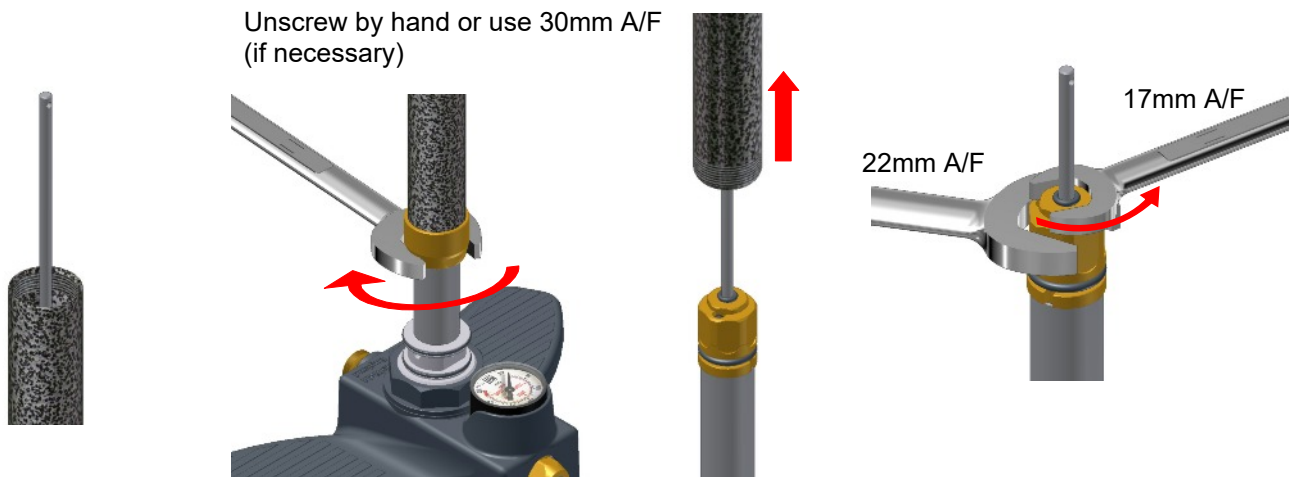

4. Unscrew outer body tube end cap and remove body tube
5. Unscrew the ball / seal retainer use a separate spanner to hold the large hexagon below it.

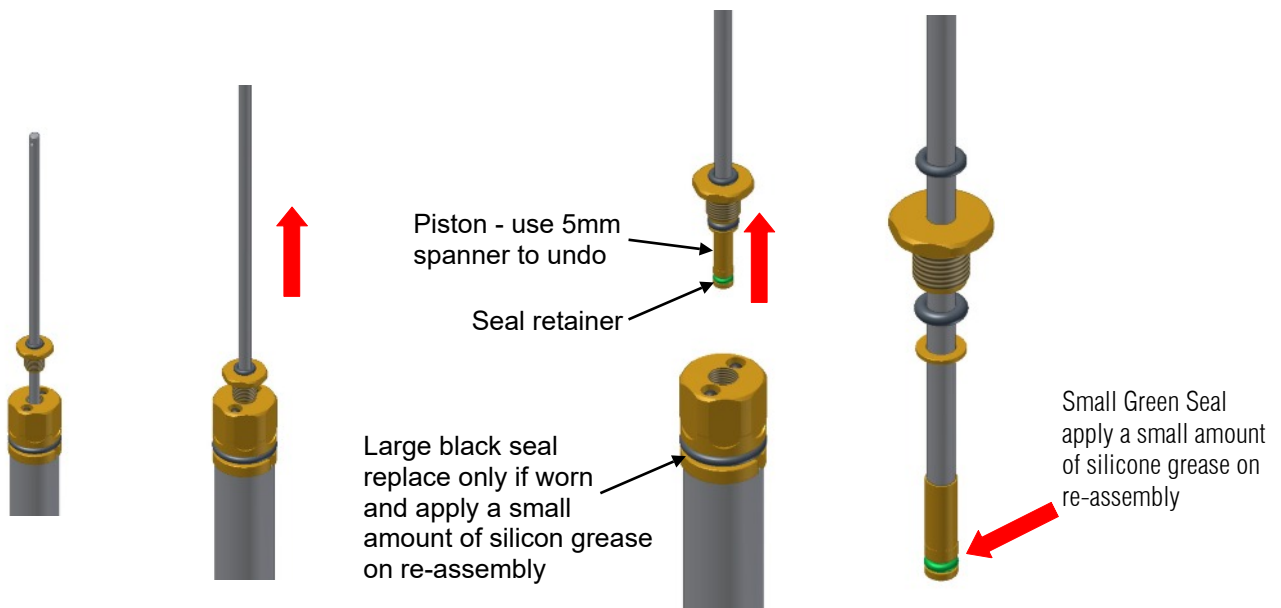

6. When free, pull the piston rod clear of the pump. Take care not to lose the two balls in the top of the pump
7. Carefully unscrew seal retainer to remove the old seal and replace if possible or replace whole piston if necessary  
**Re-assemble pump in reverse order**