



**evo-310**

# AIR COMPRESSOR QUICK START GUIDE

Full instruction manual available at:  
[www.airriflepump.com](http://www.airriflepump.com)



## IMPORTANT

THIS PRODUCT IS DESIGNED TO FILL PRE-CHARGED PCP AIR GUNS AND PAINTBALL GUNS DIRECTLY. IT CAN ALSO BE USED TO TOP UP OTHER PRESSURE VESSELS SUCH AS TANKS AND BUDDY BOTTLES. PRESSURE VESSELS SHOULD ONLY BE FILLED BY COMPETENT PEOPLE.

**FAILURE TO FOLLOW THE INSTRUCTIONS OR MISUSE OF THE COMPRESSOR WILL VOID YOUR WARRANTY AND MAY RESULT IN DEATH OR INJURY.**



## DANGER OF EXPLOSION

FROM OVERFILLING OF COMPRESSED AIR BOTTLES.

**DO NOT EXCEED THE MAXIMUM FILL PRESSURE OF YOUR PRESSURE VESSEL. ONLY FILL CYLINDERS THAT ARE IN GOOD CONDITION, FIT FOR OPERATION AND ARE IN DATE OF INSPECTION.**



## IMPORTANT



READ ALL INSTRUCTIONS BEFORE USE. YOU SHOULD ALWAYS WEAR HEARING PROTECTION AND SAFETY GLASSES WHEN OPERATING THIS COMPRESSOR.



## WARNING

WITHOUT ADEQUATE FILTRATION, THIS COMPRESSOR DOES NOT PRODUCE AIR SUITABLE OR CERTIFIED FOR BREATHING APPARATUS; DO NOT USE IT TO FILL SCUBA TANKS THAT MAY LATER BE USED FOR BREATHING.



## DANGER OF ELECTRIC SHOCK

DO NOT OPERATE IN THE RAIN OR WITH WET HANDS OR CLOTHES



## DANGER

PARTS OF THIS COMPRESSOR GET VERY HOT. KEEP OUT OF REACH OF CHILDREN AND ANIMALS.



## WARNING


DO NOT TOUCH MOVING PARTS SUCH AS THE COOLING FAN. KEEP FINGERS, HAIR AND LOOSE CLOTHING AWAY FROM MOVING PARTS.

## OPERATING TEMPERATURE

+3°C to 75°C (41°F to 167°F)

THERMAL PROTECTION WILL NOT ALLOW COMPRESSOR TO START OUTSIDE THIS RANGE.

THIS COMPRESSOR FEATURES AN AUTOMATIC PRESSURE PURGE SYSTEM WHICH MAY EXPELL SMALL AMOUNTS OF WATER AND SILICONE OIL, WHICH MAY BE DEPOSITED ON SURROUNDING SURFACES.

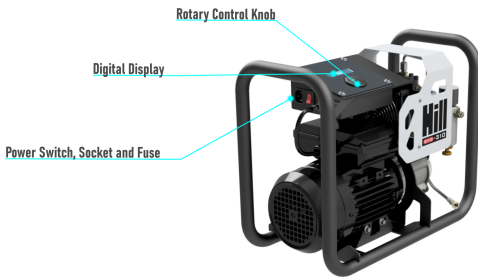

## SET UP - OIL

1. Fill crank with 50ml of crank oil (entire bottle) and allow 5 mins to settle.
2. Fill silicone oil up to the max limit indicated on the reservoir by the blue line.
3. Keep silicone oil always topped up to blue line
4. Change crank oil every 50 running hours or once yearly (whichever comes first).

**DO NOT MIX OILS**

## OPERATING INSTRUCTIONS

For full operating manual and images go to:  
[www.airriflepump.com](http://www.airriflepump.com)

1. Connect filling probe to bottle or gun
2. Ensure bleed screw is closed finger tight
3. Insert power cable into pump
4. Switch compressor on
5. Press rotary control knob to confirm lubricant levels are checked and are correct
6. To set the pressure press control knob to set required pressure. Rotate clockwise to increase fill pressure. When you reach the desired pressure press control knob to confirm.

**DO NOT SET THE COMPRESSOR ABOVE THE MANUFACTURERS RECOMMENDED PRESSURE FOR THE BOTTLE YOU ARE FILLING.**

7. Rotate control knob to reach the stat display screen. Press the control knob and the compressor will start.
8. The compressor may automatically pause and restart. This is a cooling cycle, and is a normal phase of operation.
9. When the target pressure is reached the compressor will stop.
10. Depressurise by unscrewing the bleed screw with a rag. This will expel any trapped moisture or silicone.
11. Store the compressor upright with the bleed screw undone. The compressor should not be connected to any bottle while in storage.

**DO NOT LEAVE THE COMPRESSOR UNATTENDED WHEN IN USE.**

