

3128 Air Compressor Pump Piston Seal Replacement Kit Z3128-101



Kit comprises of 1 small green seal, 1 small black seal and 1 large black seal



1. Unscrew and remove handle




2. Unscrew handle connector




3. Lift handle connector to expose pin. Use suitable tool to push pin from one side and then pull out.



4. Unscrew outer body tube end cap and remove body tube

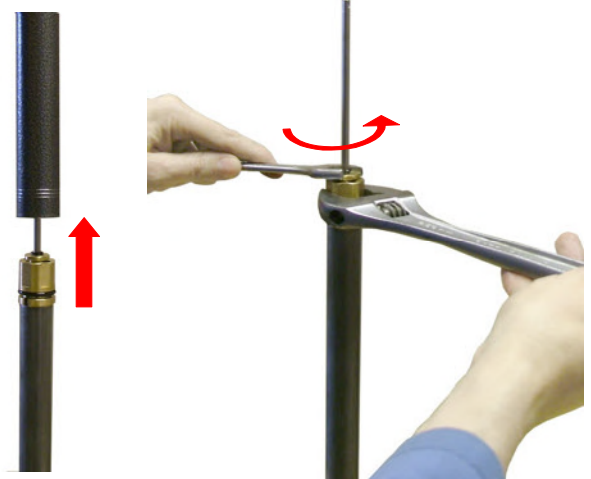

5. Unscrew the ball / seal retainer use a separate spanner to hold the large hexagon below it.

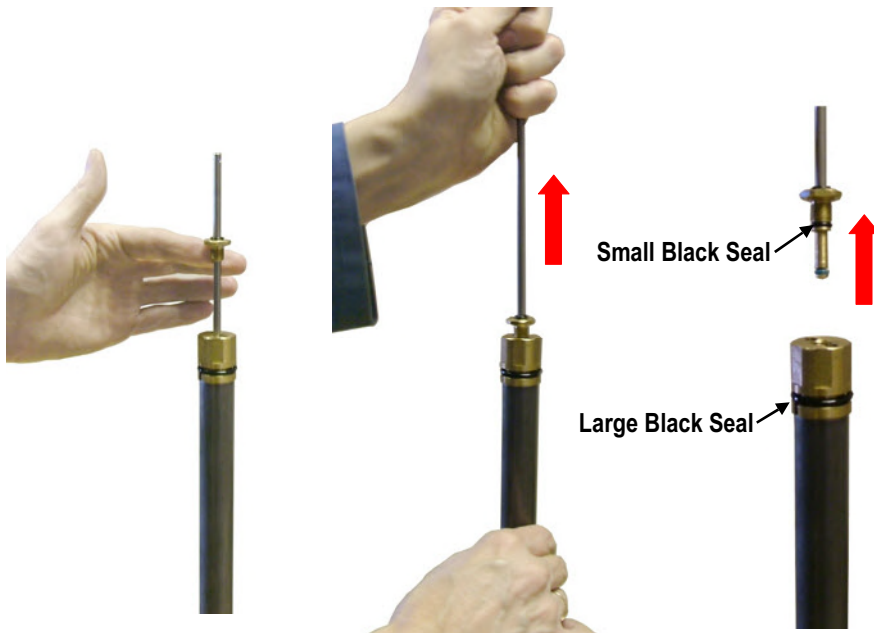

6. When free, pull the piston rod clear of the pump. Take care not to lose the two balls in the top of the pump



7. Carefully remove the old seal and replace. Apply a small amount of silicon grease an re-assemble in reverse order