



4128 Air Compressor Pump Piston Seal Replacement Kit Z4128-201




Kit comprises of 3 small green seals, 1 small black seal and 1 large black seal

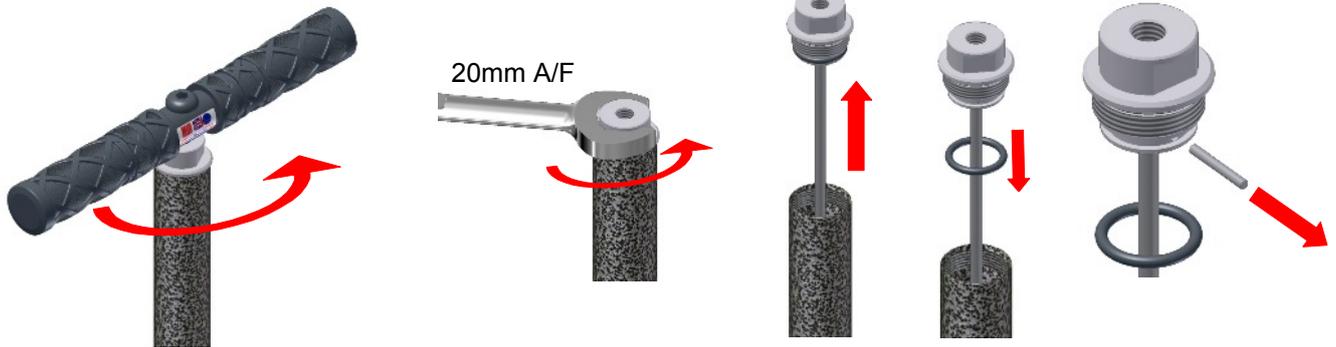

1. Unscrew and remove handle
2. Unscrew handle connector
3. Lift handle connector to o-ring. Remove o-ring to expose pin. Use suitable tool to push pin from one side and then pull out. **Ensure o-ring is securely located in groove on re-assembly.**

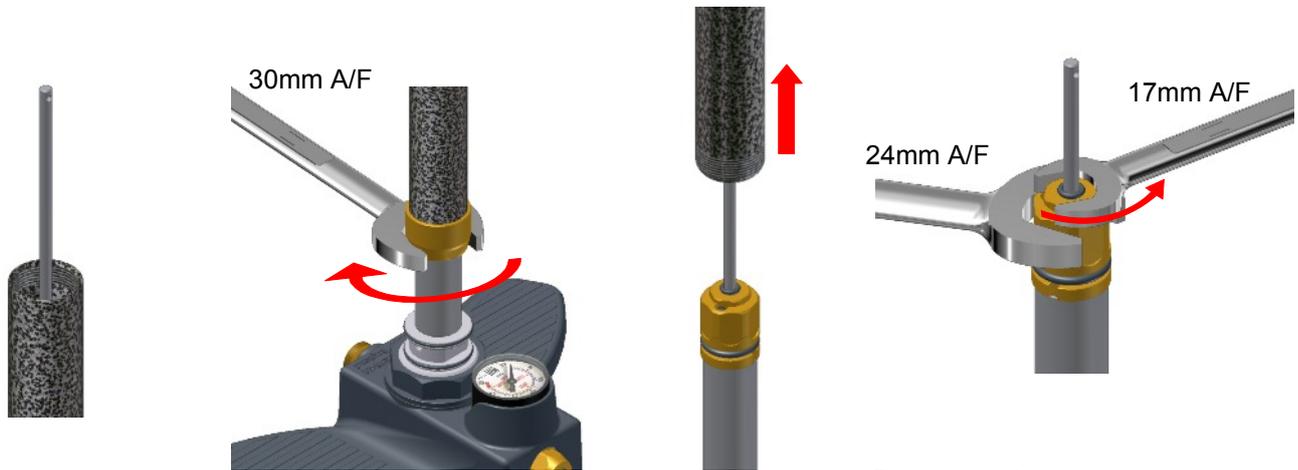

4. Unscrew outer body tube end cap and remove body tube
5. Unscrew the ball / seal retainer use a separate spanner to hold the large hexagon below it.

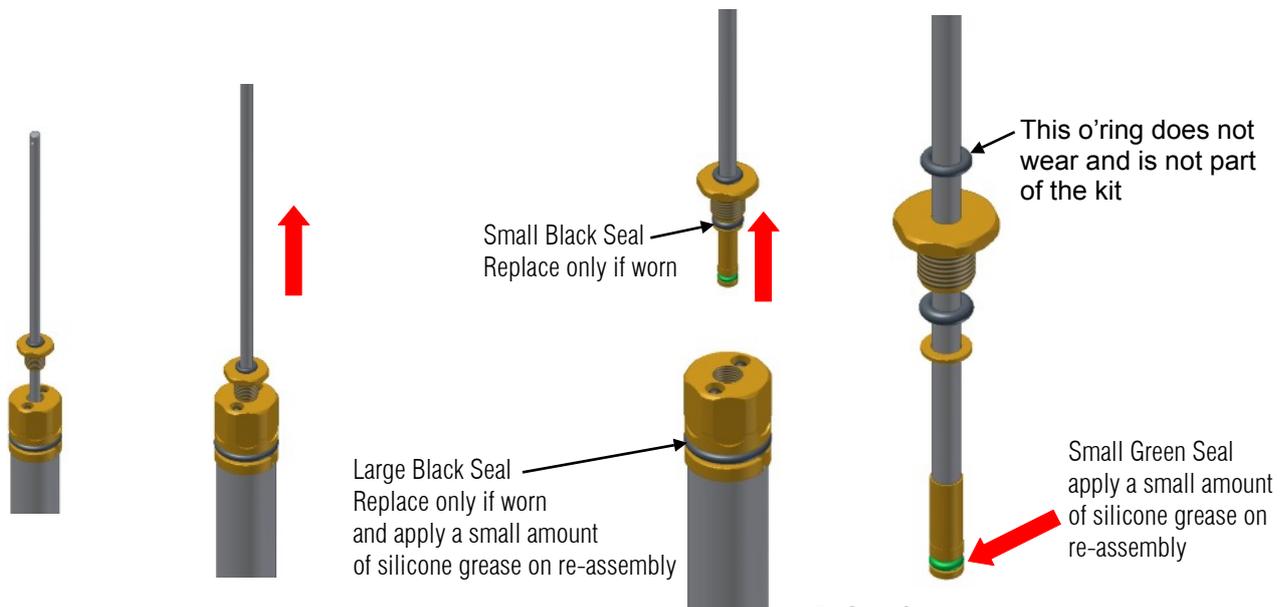

6. When free, pull the piston rod clear of the pump. Take care not to lose the two balls in the top of the pump
7. Carefully remove the old seal and replace.
Re-assemble pump in reverse order